

Gebrauchsanweisung

Kühlschrank - Box

D

Operating instructions

Mini Refrigerator

GB

Gebruiksaanwijzing

Koelkast - Boxmodel

NL

Mode d'emploi

Mini - Réfrigérateur

F

Istruzione d'uso

Frigorifero - Box

I

Instrucciones de manejo

Frigorífico Pequeño

E

Manual de utilização

 
Frigorífico Pequeno

P

Kullanım kılavuzu

Buzdolabı - Mini bar

TR

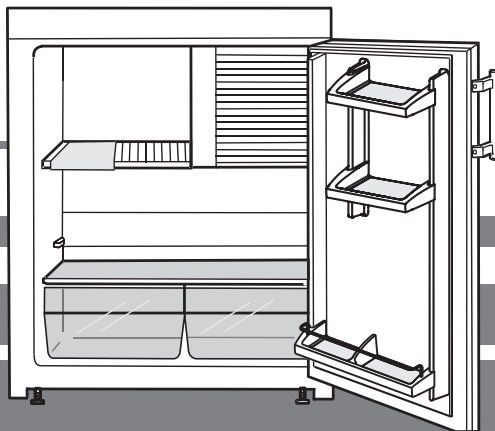

7081 874-01

KX 1021

0111

Disposal notes

The packaging is made of recyclable materials.

- Corrugated board/board
- EPS moulded parts
- Polythene sheets
- Polypropylene straps

• **Keep packaging materials away from children - polythene sheets and bags can cause suffocation!**

• Please return the packaging to an official collection point.

Your old appliance: This contains some reusable materials and should be disposed of properly - not simply with unsorted household refuse.



- Discarded appliances should be disabled: Remove the plug, cut through the connection cable and render the catch unusable so that children cannot become trapped inside.
- Ensure that the refrigerant circuit is not damaged when the appliance that is no longer needed is taken away for disposal.
- Details of the refrigerant can be found on the type plate.
- Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.

Climate rating


The appliance is set to operate within specific ambient temperature limits according to its climate rating. These temperature limits should not be exceeded. The correct climate rating for your appliance is indicated on the type plate.

Climate rating Ambient temperatures

SN	+ 10° to + 32 °C
N	+ 16° to + 32 °C
ST	+ 16° to + 38 °C
T	+ 16° to + 43 °C

Contents

	Page
Setting up	
Dimensions	
Connecting to the mains	
Saving energy	
Switching the appliance on and off	
Setting the temperature	
Interior light.....	7
Cooling	
Making ice-cubes	
Defrosting	
Cleaning.....	8
Malfunctions	
Shutting down	
Changing over door hinges.....	9

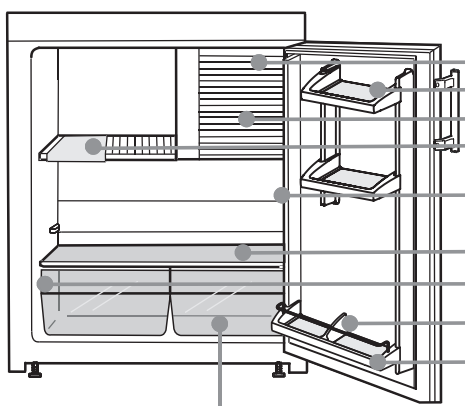 

Safety instructions and warnings

- To prevent injury or damage to the unit, the appliance should be unpacked and set up by two people.
- In the event that the appliance is damaged on delivery, contact the supplier immediately before connecting to the mains.
- To guarantee safe operation, ensure that the appliance is set up and connected as described in these operating instructions.
- Disconnect the appliance from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- When disconnecting the appliance, pull on the plug, not on the cable.
- Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorised work could prove highly dangerous for the user. The same applies to changing the mains power cable.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.
- Do not stand on the plinth, drawers or doors or use them to support anything else.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Avoid prolonged skin contact with cold surfaces or chilled/frozen food. This could cause pain, numbness and frostbite. In the case of prolonged skin contact, protective measures should be taken, e.g. gloves should be worn.
- Do not eat ice cream, particularly ice lollies or ice cubes, immediately after taking them from the freezer compartment as there is a risk of "burning" because of the very cold temperatures.
- Do not consume food which has been stored for too long, as it could cause food poisoning.
- The device is designed exclusively for the cooling of foodstuffs. The applicable statutory regulations are to be observed in the event that the device is to be used for commercial cooling of foodstuffs. The device is not suitable for the storage and cooling of drugs, blood plasma, laboratory preparations or similar medicine-related materials and products as detailed in the Medical Devices Directive 2007/47/EC. Improper use of the device can cause the stored products stored in it to be damaged or the items can be spoiled. In addition, the device is not suitable for operation in explosion-prone areas.
- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane etc. in the appliance. Electrical components might cause leaking gas to ignite. You may identify such sprays by the printed contents or a flame symbol.
- Do not use electrical appliances inside the appliance.
- Special-purpose lamps (incandescent lamps, LEDs, fluorescent tubes) in the appliance serve to illuminate the appliance interior and are not suited for room illumination.

These instructions describe all the appliance's controls and equipment. Please bear in mind that individual models may differ slightly from these instructions.

Freezer compartment

Door rack

Ice-cube tray

Grid shelf with flap

Temperature control

Glass shelf

Type plate

Adjustable bottle and can holder

Door rack for large bottles

Vegetable bins

Setting up

- The floor on which the appliance stands should be horizontal and level. To compensate for any unevenness, adjust the height of the feet with the open-ended wrench supplied. The appliance can be placed with its back flush to the wall.
- Always position the appliance directly up against the wall.
- The ventilation grilles should not be obstructed.
- Condensation may form on the outside of the refrigerator/freezer during periods of high humidity. Constant ventilation of the installation site is recommended.
- Do not place heat-emitting appliances, e.g. microwave oven, toaster, etc., on top of the freezer.
- Keep burning candles, lamps and other items with naked flames away from the appliance so that they do not set the appliance on fire.
- Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m³ per 8 g of R 600a refrigerant used in the appliance, so as to avoid the formation of inflammable gas/air mixtures in the room where the appliance is located in the event of a leak in the refrigerant circuit. The quantity of refrigerant used in your appliance is indicated on the type plate on the inside of the appliance.
- Fire hazard due to dampness!
If live parts or the mains lead become damp this may cause short circuits.
- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- CAUTION! Risk of injury and danger of damage as a result of incorrect transport!
- Transport the appliance in a packed condition.
- Transport the appliance upright.
- Do not transport the appliance without assistance.
- The appliance may be moved only when it is empty.

Connecting to the mains

Power supply (a.c.) and voltage at the operating point must comply with the details on the type plate which is located on the left-hand inside wall, next to the top freezer drawer. The socket must be fused with a 10 A fuse or higher. The socket should be easily accessible and not directly behind the appliance.

- Do not connect the appliance to the supply with other equipment using a distribution outlet - risk of overheating.
- **Connect the appliance through a properly earthed plug and socket.**

Saving energy

- Always ensure good ventilation. Do not cover ventilation openings or grille.
- Do not place appliance in areas of direct sunlight or next to a stove, heater or similar object.
- The energy consumption depends on the installation conditions, e.g. the ambient temperature.
- Keep the time the appliance is open to a minimum.
- The lower the temperature setting, the higher the power consumption.
- Store food logically.
- Ensure that all food is well packed and covered for storage. This will prevent frost from forming.
- Remove food as needed in order that it does not warm too much.
- First cool warm food to room temperature before storing it.
- Defrost frozen food in the refrigerator.
- If there is a thick layer of frost in the appliance: defrost the appliance.

Accumulated dust increases the energy consumption:


- Once a year, dust the refrigerating unit together with the metal grille of the heat exchanger at the back of the appliance.



Dimensions [mm]

h	a	g	e	e'	d	c	c'
630	554	610	624	653	1129	562	591

 GB

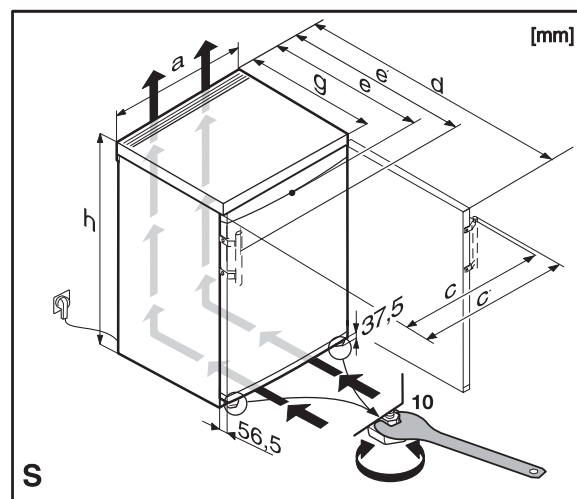

Switching the appliance on and off

You are recommended to clean the appliance before switching it on for the first time (see "Cleaning").

- Turn the temperature control ① clockwise from "0" to "1". The appliance is now switched on.

Setting the temperature

Turn the temperature control ① to set the desired temperature.

- Setting "1" = lowest cooling setting, highest temperature
- Setting "7" = highest cooling setting, lowest temperature

Remember that the temperature depends on the ambient temperature (location of appliance), the number of times the door is opened and how much frozen food is stored. The setting should be adjusted accordingly if necessary.

 
Interior light

Bulb data: 15 W (never use a bulb rated at more than 15 W). The voltage should agree with the details on the type plate.

Socket: E 14.

Replacing the bulb:

- Pull out the mains plug or remove/unscrew the fuse.** Reach behind the cover, unscrew the bulb and replace.

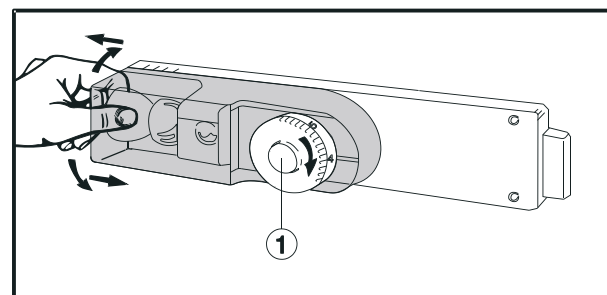

Cooling

Because of the air circulation the temperature in the refrigerator compartment is not uniform. Just above the vegetable bins and at the back of the refrigerator compartment the air is colder.

Storage example

 
- ❶ butter, cheese
- ❷ eggs
- ❸ bottles
- ❹ frozen food, ice cubes
- ❺ baked goods, pre-cooked meals, drinks
- ❻ meat, sausage products, dairy products
- ❼ fruit, vegetables, salad, fresh herbs

Note

- Food which gives off or absorbs odours and flavours as well as liquids should always be stored covered or in closed containers. High-percentage alcohols should be tightly sealed and stored upright.
- Fruit, vegetables and salad can be stored unpacked in the bins.
- Reuseable plastic, metal, aluminium and glass containers can be used for packaging.


Note

- Place food inside the appliance as shown in the diagram. This allows the appliance to save energy during operation.
- Shelves, drawers and baskets are arranged for optimum energy efficiency on delivery.

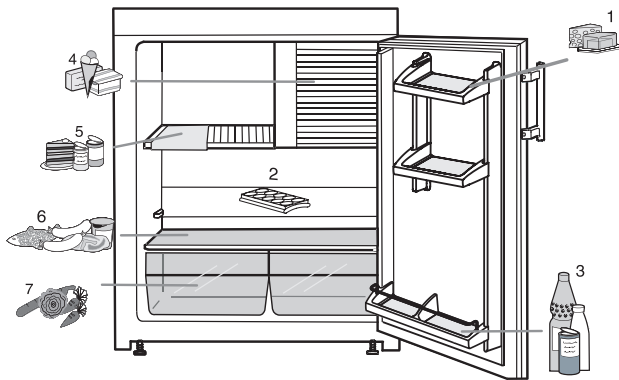

Making ice-cubes

 - Fill the **ice-cube tray** three-quarters full with water and freeze. The ice-cubes can be removed from the tray by twisting or by holding upside down for a short time under running water.

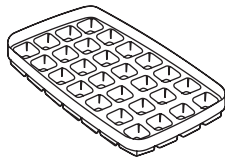


Defrosting

After a longer period of operation a layer of frost or ice can build up on the cooling elements. Remove a **frost layer** of this kind from time to time with a plastic scraper.

- Switch the appliance off to defrost. **Pull out the mains plug.**
- To speed up the defrosting process put a saucepan of hot but not boiling water on one of the cooling elements.
- Leave the door of the appliance open while defrosting. After defrosting mop up the remaining water and clean the appliance.

Do not use any mechanical devices or other artificial aids for defrosting other than those recommended by the manufacturer.

 - Pull out the drip tray from under the ice-cube compartment, empty it and dry it off

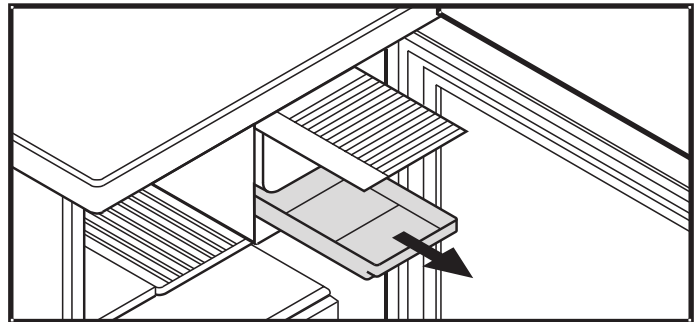

Cleaning

Before cleaning always switch off the appliance. Pull out the mains plug or remove/unscrew the fuse.

- Wash shelves, glass plates and other options by hand.

Clean the inside, equipment parts and outer walls with luke-warm water and a little detergent. Do not use abrasive or acid cleaners or chemical solvents.

Do not use steam cleaners because of the risk of injury and damage.

- Ensure that no cleaning water penetrates into the electrical components or ventilation grille.
- Dry all parts well with a cloth.
- Do not damage or remove the type plate on the inside of the appliance. It is very important for servicing purposes.

